


RE200 RECUMBENT BIKE

INSTRUCTION MANUAL

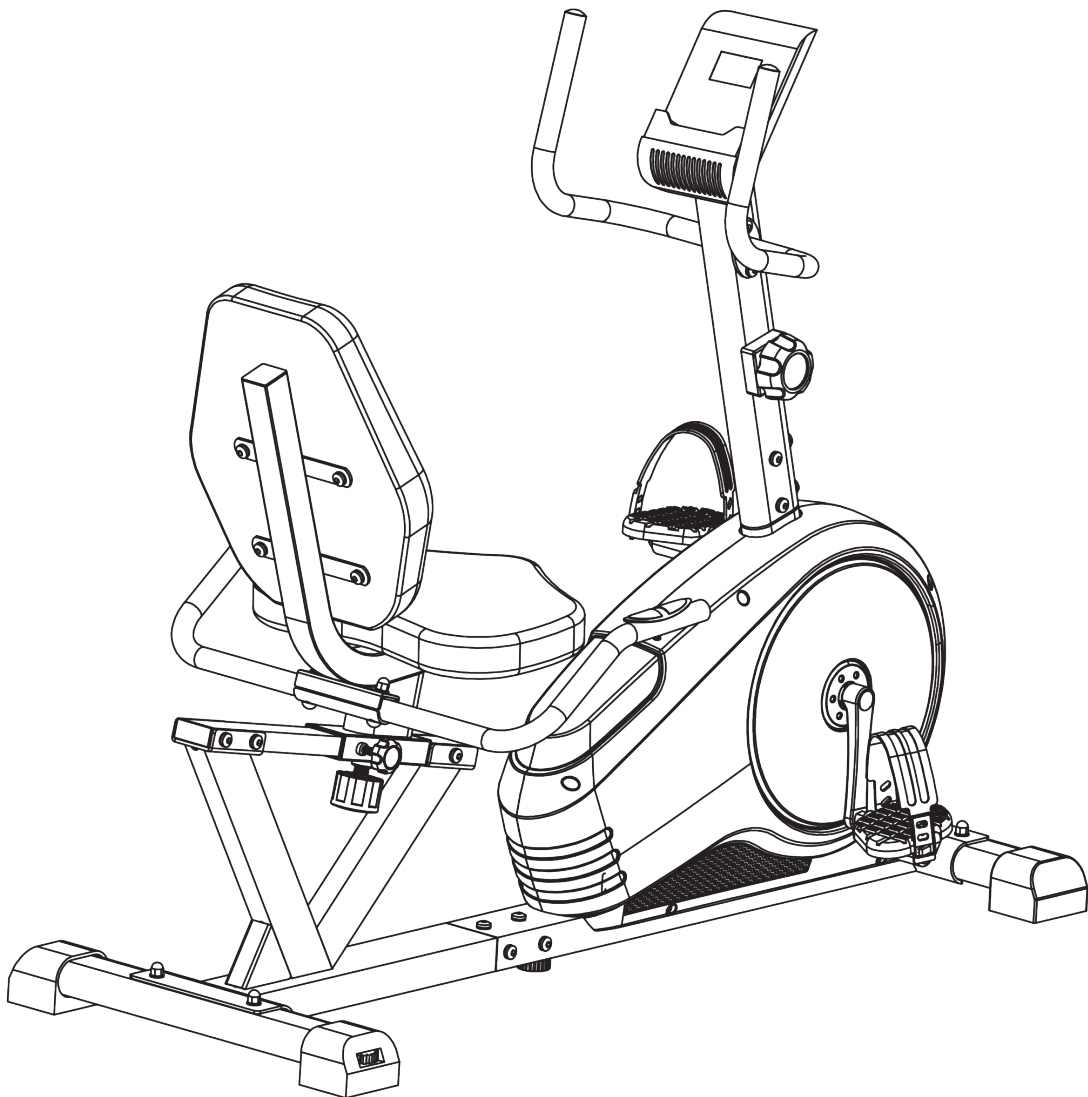

Scan the QR code for a step-by-step video guide on how to assemble your exercise bike.

Scan the QR code to view our support center for more technical resolutions and FAQ's about your item.



CONTENTS

Exploded diagram	4
Parts list	5

1. SAFETY INSTRUCTIONS

Important safety information	6
User safety precautions	7
Prior to use.....	7
During use.....	7
Exercise safety precautions	7
Facility safety precautions	7
Warning stickers	8

2. ASSEMBLY

Preparing the site	9
Diagram	9
Content listing	10
Box contents.....	10
Tools pack.....	10
RE200 assembly	11
Adjusting the handlebars	13
Monitor configuration	13
Testing the bike operation	14
Specifications	14

3. OPERATION

Heart-rate sensors	15
Functions	15
Monitor instructions	15
Scan mode.....	15
Main display.....	15
Target programs.....	16
Resetting your monitor.....	16


4. MAINTENANCE

Preventive maintenance activities.....	17
Bike cleaning.....	18
Bike balance.....	18

5. ADDITIONAL INFORMATION

Contact information.....	19
Disclaimer.....	19

EXPLODED DIAGRAM

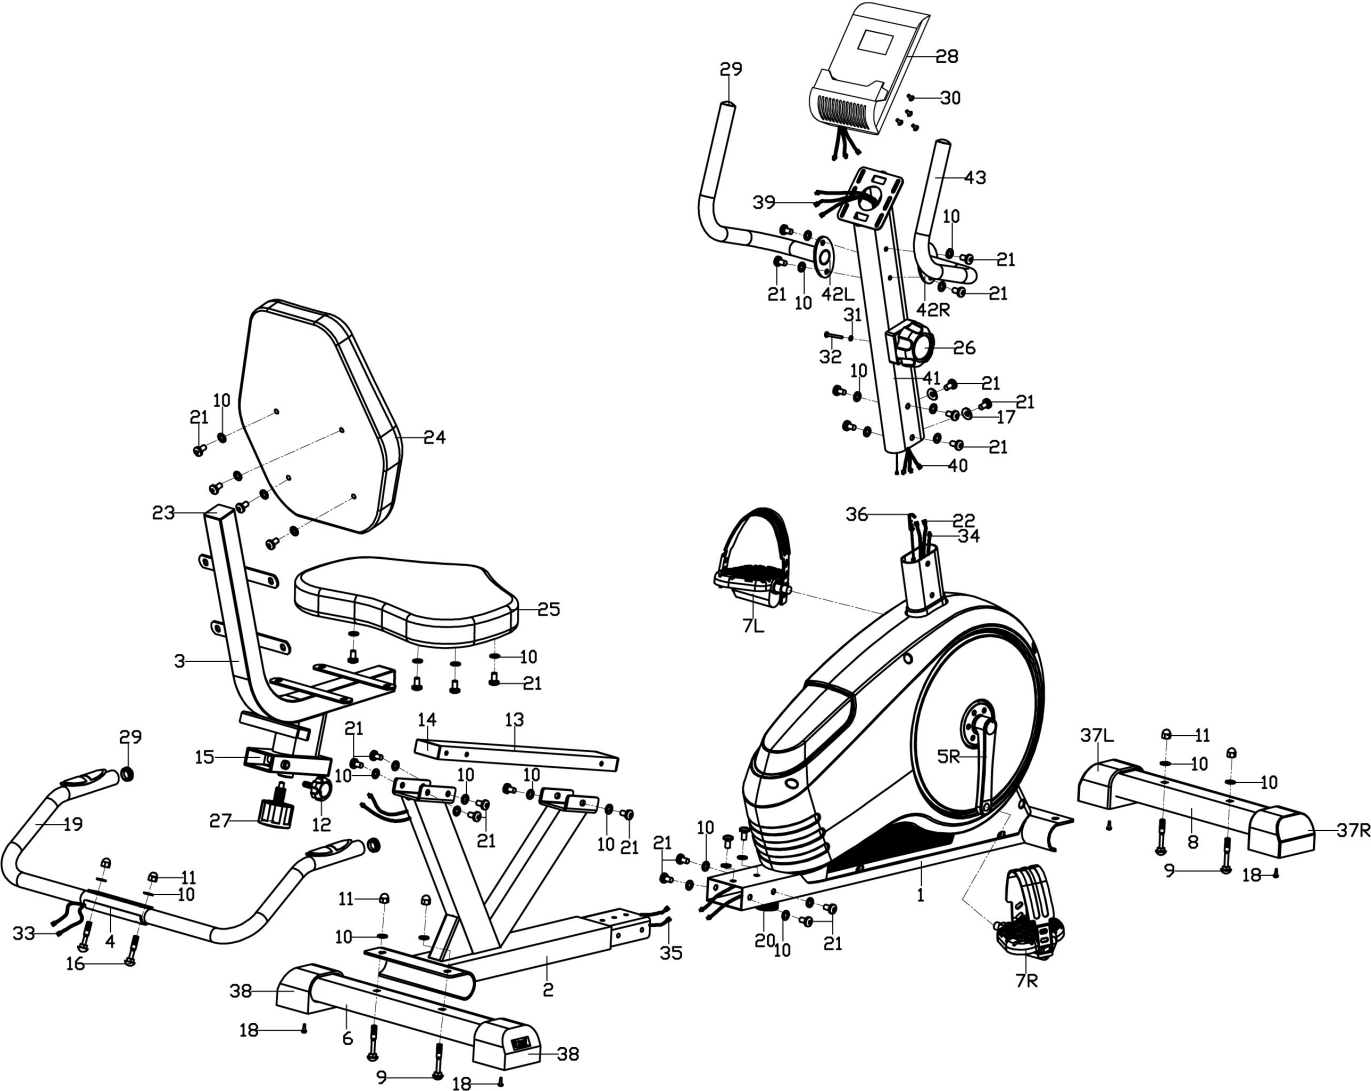

PARTS LIST

NO.	DESCRIPTION	Q'TY	NO.	DESCRIPTION	Q'TY
1	Front main frame	1	23	Square cap	2
2	Rear main frame	1	24	Backrest	1
3	Seat bracket	1	25	Seat	1
4	Handlebar	1	26	Tension controller	1
5 L/R	Crank	1 pr	27	Spring knob	1
6	Rear stabilizer	1	28	Computer	1
7 L/R	Pedal	1 pr	29	End cap	4
8	Front stabilizer	1	30	Cross pan head screw	4
9	Carriage bolt M8*55*L20	4	31	Flat washer	1
10	Flat washer D8	34	32	Cross pan head screw	1
11	Acorn nut M8	6	33	Extension pulse wire 1	2
12	Plum bolt	1	34	Sensor wire	1
13	Adjustable tube	1	35	Extension pulse wire 2	2
14	Square cap	2	36	Tension cable	1
15	Bushing	2	37 L/R	Front end cap	1 pr
16	Carriage bolt M8XL45	2	38	Rear end cap	2
17	Arc washer Φ8.2×Φ16*1.5 R20	2	39	Extension pulse wire 3	2
18	Cross pan head screw ST4.2X18	4	40	Extension sensor wire	1
19	Foam grip	2	41	Handlebar post	1
20	Knob	1	42L/R	Handlebar L/R	1 pr
21	Inner hex screwM8×15	30	43	Foam grip	2
22	Extension pulse wire 4	2			

1 SAFETY INSTRUCTIONS

Please pay attention to the following instructions before operating this bike.

IMPORTANT SAFETY INFORMATION

Thank you for choosing our product. To ensure your health and safety, please use this equipment as advised. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained and used in accordance to the manual. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult a health professional to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. A health professional's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, light-headedness, dizziness or feelings of nausea. If you do experience any of these conditions, you should consult a health professional before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 2 feet (61 cm) of free space all around it.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately. Please contact JLL Fitness on 0800 6123 988 for advice on how to resolve the issue.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.

9. To avoid bodily injury and/or damage to the product or property, ensure to follow safe procedures for lifting and moving the item.
10. Your product is intended for use in cool, dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.

USER SAFETY PRECAUTIONS

PRIOR TO USE

- Assemble the bike according to the instruction manual.
- Consult your doctor before beginning any exercise program.
- Read instructions.
- Read warning labels.
- Read emergency stop procedures.
- Maximum user weight is 100kg/ 15 St.
- Inspect unit. If damaged, DO NOT USE.
- Ensure every bolt and screw is securely tightened.

DURING USE

- DO NOT use for stretching and DO NOT attach straps or other devices.
- DO NOT allow children aged 12 or younger to be on or near the machine.
- Stop exercising if you feel faint, dizzy, or encounter pain.
- Keep all clothing and accessories clear of moving parts.

EXERCISE SAFETY PRECAUTIONS

- Use sports clothes and gym shoes.
- DO NOT use with bare feet.
- This model has been designed for domestic purposes only.

FACILITY SAFETY PRECAUTIONS

- DO NOT operate in damp or wet locations.
- Use caution when getting on or off the bike.
- Check the bike for worn or loose components before each use. DO NOT use until worn or damaged parts are replaced.
- Maintain regularly. Refer to *Preventive Maintenance* chapter.
- DO NOT use the bike if: (1) the bike is not working adequately or (2) the bike has been dropped or damaged.
- DO NOT use the bike outdoors.

- Read the instruction manual completely before using the bike.
- Ensure all users wear appropriate footwear on JLL® equipment.
- As far as possible provide the following clearances: 0.5 m at each side and 2 m at the back. Be sure your bike is clear of walls, equipment and other hard surfaces.
- DO NOT modify the bike in any way. Any modifications will void the warranty.
- All the data displayed by the monitor is for reference purposes only.

WARNING STICKERS

Warning stickers indicate a potentially hazardous situation which, if not avoided, could result in death or serious injury. Carefully read the following caution and warning labels before using the unit.

⚠ WARNING

It is strictly forbidden to touch any moving parts of the bike.

⚠ WARNING

Keep small children and pets a safe distance from bike when in use.


2 ASSEMBLY

PREPARING SITE

To find the ideal location to set up this bike, ensure that:

- Area is well illuminated and well ventilated.
- Surface is level.
- There is enough space to access the unit and emergency dismount. If it is possible, keep the following clearances: 0.5 m at each side and 2 m at the back.
- The bike is placed in an environment with a relative humidity range of 30-50%. Please ensure the temperature is kept constant. Do not use in a moist or damp environment as this may impact on the integrity and performance of the machine.


DIAGRAM

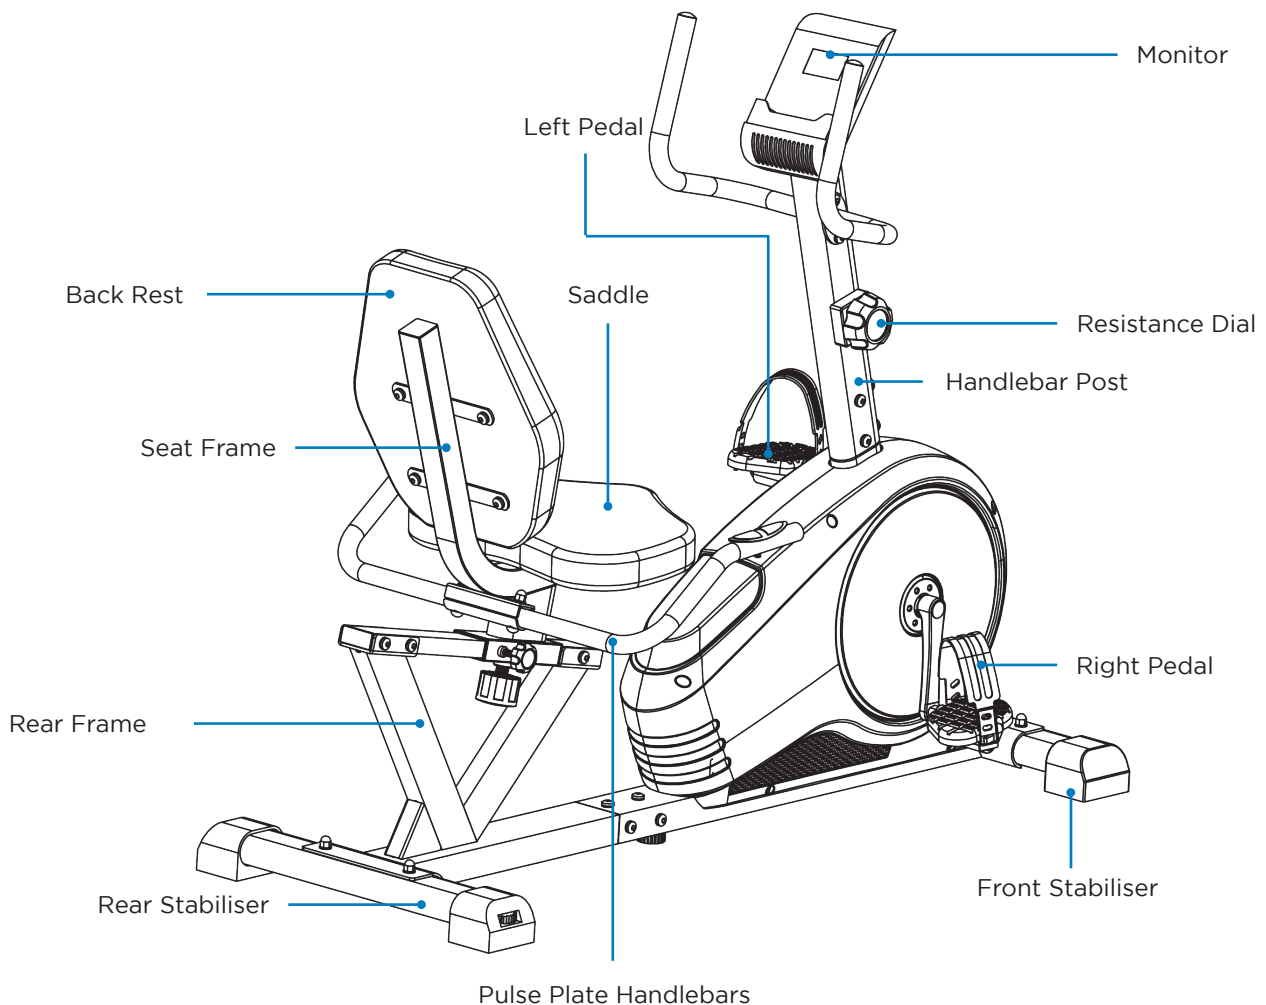


CONTENT LISTING

See diagram (left) and content listing (below) for recumbent bike box contents. See *Customer Service* chapter for contact information if any parts are missing.


BOX CONTENTS

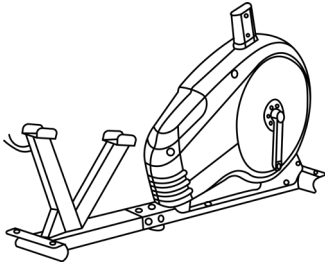


Main Base

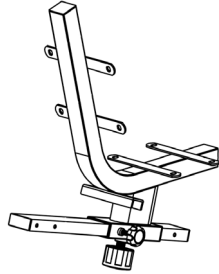


Adjustable Tube

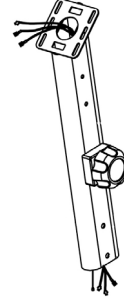


Handlebar Post

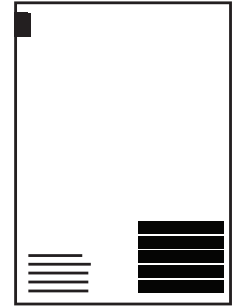


Manual

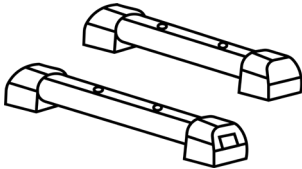


Stabilisers x2

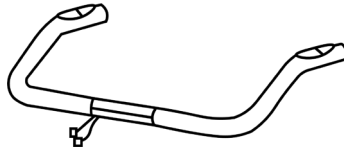


Pulse Plate Handles

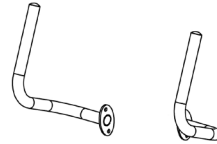


R/L Handles

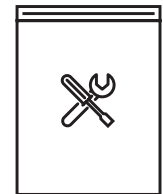

Tools Pack²

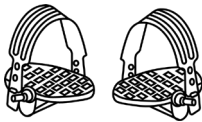


Pedals R/L

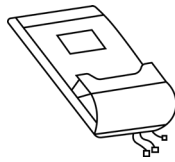

Monitor




Seat

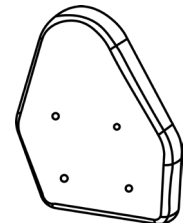


Back Rest

² TOOLS PACK

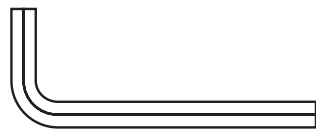

Hex Allen Key
x1

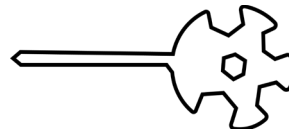


Multi-Tool
x1

RE200 ASSEMBLY

The bike has been assembled and tested at the factory, so you shouldn't have any problems putting all the parts together. Components are designed to fit together, and only basic tools are required for the assembly process. Inside the box you will find a Tools Pack (Hex Allen Key, Multi-Tool, Washers and Bolts). See previous page.


To assemble your JLL RE200 please follow these easy steps:

STEP 1

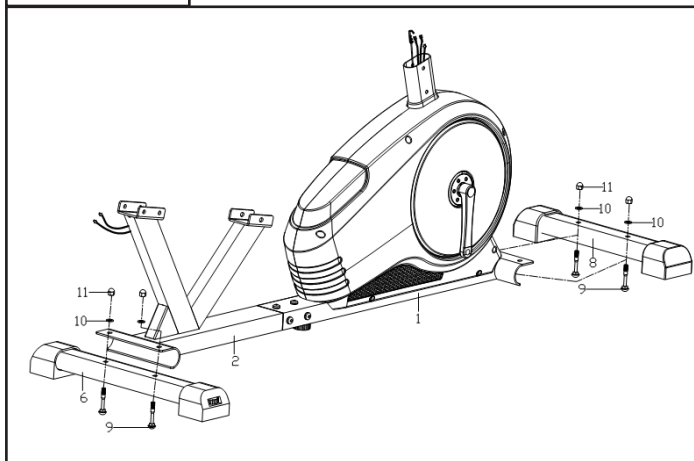


Attach the front (8) and rear (6) stabilisers to the base using two carriage bolts (9) per stabiliser along with two flat washers (10) and acorn nuts (11).


STEP 2

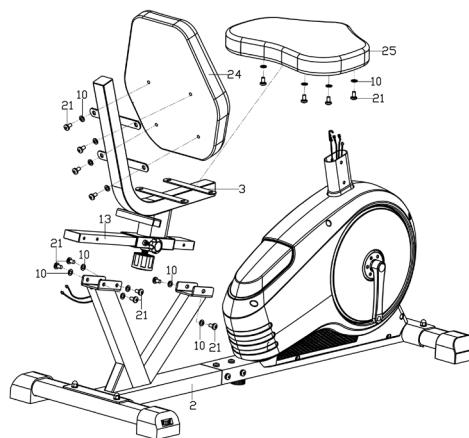


Fix the adjustable tube (13) to the rear main frame using six inner hex screws (21) and six flat washers (10). Then attach the seat (25) and back rest (24) to the frame using four inner hex screws (21) and flat washers (10) for each.

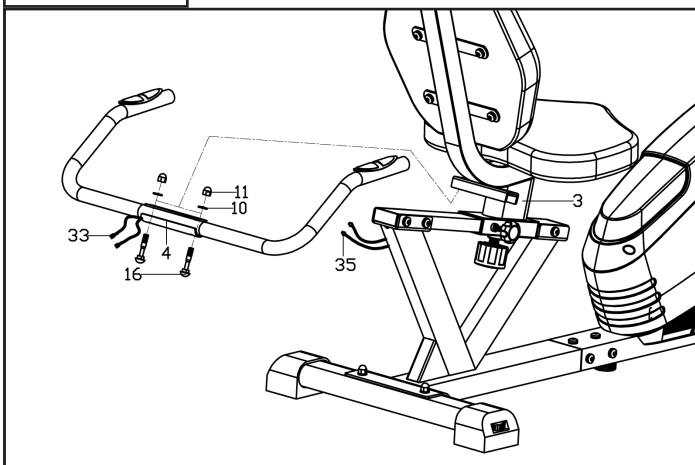STEP 3


Connect the handlebar (4) to the bracket under the seat and secure using two carriage bolts (16), flat washers (10) and acorn nuts (11). Then join the pulse wires from the handlebar to the base.

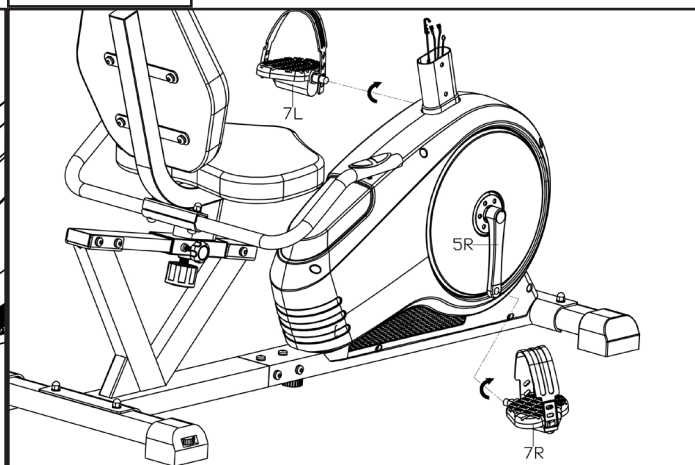STEP 4

Attach the right and left pedals (7L/R) to the corresponding cranks, each will be labelled right and left. **ATTENTION!** Turn the right pedal clockwise and the left anti-clockwise. Failure to do so correctly may result in permanent damage to your bike.

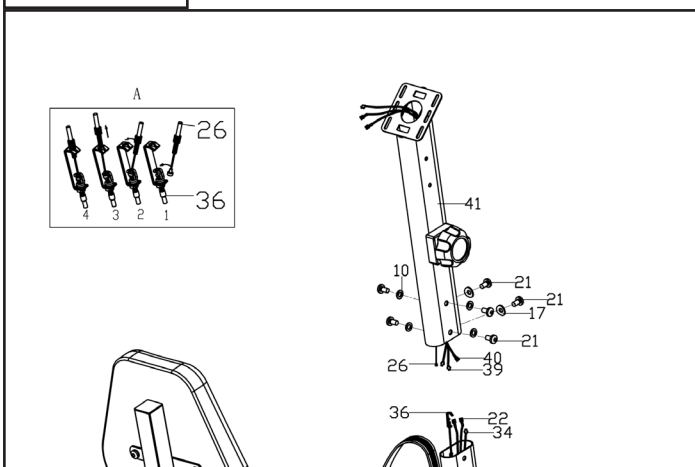STEP 5

Next, attach the handlebar post to the base by first connecting the sensor wires (40+34+39) to the corresponding wires from the base. Then connect the tension cable as shown in the diagram on the right. Please Note: this will take some force and make sure the resistance dial is already turned down to number 1. Lock in place using six inner hex screws (21), arc washers (17) and flat washers (10).

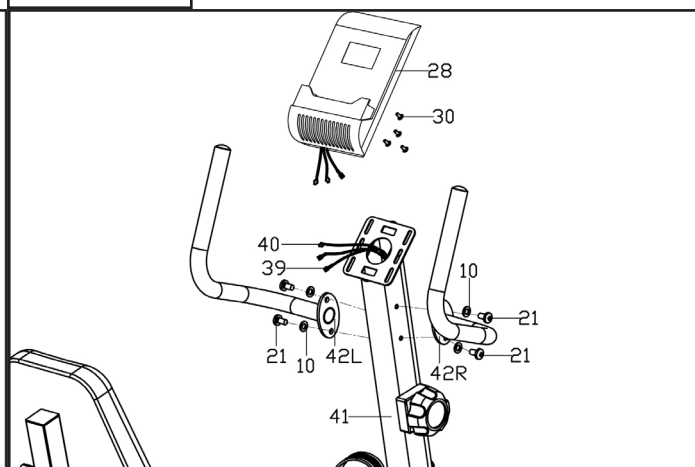STEP 6

Next, secure the right and left handlebars (42R/L) to the handlebar post using two inner hex screws (21) and flat washers (10) per side. Then connect the wires from the monitor to the frame and secure the monitor (28) to the bracket using the four screws (30) found in the back.

MONITOR CONFIGURATION



1	LCD display	3	Function Buttons
2	Function Symbols	4	Tablet Holder

TESTING THE BIKE OPERATION

Use the following instructions to test the full resistance of the bike and to check the machine for proper operation.

1. Sit on the bike and start pedalling, change the levels of resistance and check to make sure you feel a difference in difficulty.
2. As you are pedalling make sure you don't feel any wobble in your machine.
3. As you pedal on your bike check that there are no unusual noises.
4. Finally check the monitor to make sure the digits are changing on each setting to record your workout correctly.

SPECIFICATIONS

Display	Display: Scan Mode, Time, Speed, Distance, Calories, Odometer and Pulse
Flywheel	5KG Two Way Flywheel
Pedals	Adjustable toe straps
Resistance	8 Levels of magnetic resistance
Seat	Adjustable seat with forwards and back movement
Handlebars	Pulse plates built into the handlebars
Storage	Transport wheels on the front stabiliser
Maximum User Weight	100kg, 15 St
Occupying Area	130 x 59.5 x 109cm
Packaging Dimensions	135cm (Length) x 35cm (Width) x 25cm (Height)
Gross Weight	38KG
Net Weight	34KG

3 OPERATION

Read all instructions, warnings and safety procedures located in the *Safety* chapter before using the bike.

HEART-RATE SENSORS

Hold the sensor plates on the handlebars ensuring that your hands are clean. A heart-rate reading will show on the display. Factors that interfere with pulse signal are:

- Hand lotions, oils or body powder.
- Excessive dirt.
- Excessive movement.

 NOTE: Heart-rate is calculated by PPM (Pulsations per minute).

FUNCTIONS

DISTANCE: The distance covered in kilometres during your workout.

TIME: Counts the duration of your workout.

SPEED: Calculates your current speed while exercising.

PULSE: Calculates your current heart rate while exercising.

CALORIE: Counts the estimated calories burnt while exercising.

ODOMETER: The distance covered in kilometres since the machine has first been used.

SCAN: Scans through each function repeatedly.

MONITOR INSTRUCTIONS

SCAN MODE

When you first power on the monitor it will be set in a scan mode, displaying all your data every few seconds. There will be a scan graphic in the top left corner to indicate this, to exit scan mode press the mode button.

MAIN DISPLAY

Out of scan mode, continually press the mode button to change what function is displayed. Along the bottom of the screen there will be text indicating what function is showing.

TARGET PROGRAMS

With the RE200 monitor you are able to set a target time, distance, calories and pulse. Press the mode button until the function you want to set is showing, then press the set button continually to increase the digits. Once you've set your target, you can either set another by pressing the mode button to move onto the next setting or start pedalling to begin your workout.

RESETTING YOUR MONITOR

To reset the digits on your monitor press and hold the reset button, this will return everything to zero.

4 MAINTENANCE

Maintenance must be performed on a regular basis. Performing maintenance actions can aid in providing safe and trouble-free operation of all JLL® equipment.

JLL® are not responsible for performing regular inspection and maintenance actions for your machine. JLL® representatives are available to answer any questions that you may have on +44 (0)800 6123 988.

PREVENTIVE MAINTENANCE ACTIVITIES

Every JLL® bike that comes from the factory is already maintained, however, you just need to follow simple steps to keep it in fully working condition. Keeping the bike in a clean state will help to prolong its life. Perform regular preventive maintenance to ensure normal operation of the unit. Keep a log of all maintenance actions to assist in staying current with all preventive maintenance activities. JLL® is not responsible for performing regular inspection or maintenance.

Read all instructions and warnings listed both in this chapter and in the *Safety* chapter. During maintenance, disconnect the power cable. Contact JLL® Customer Service on +44 (0)800 6123 988 for any maintenance or service concerns.

Requirements:

- Water
- Dry cloth
- Vacuum

WARNING

1. Only use water to clean and dust. Do not use any cleaning product because they may damage the bike.
2. Be careful not to spill or get excessive moisture between the edge of the monitor, as this might create an electrical hazard or cause failure of the electronics.

WARNING

1. Use only JLL® replacement parts.
2. If you allow your machine to become rusty, this will affect your warranty.

Depending on where the bike is placed, you may experience dry air, causing a common experience of static electricity. You can notice that by walking across a carpet and then touching a metal object. On your bike you may experience a shock due to the build-up of static electricity on your body and the discharge path of the bike. If you experience this type of situation, you may want to increase the humidity to a comfortable level through the use of a humidifier.

Check your machine regularly for rust. If rust starts to appear on the screws it means the item is not housed in the correct environment and will need to be moved to a more suitable room. Any rust will indicate there may be moisture in the air and as a result this could impact on the integrity and performance of your machine.

EXERCISE BIKE CLEANING

After every workout use a neat, dry cloth for cleaning the bike and the handlebars to prevent the machine of corrosion. Wipe away any sweat that may have dripped onto the monitor or handlebars. Avoid scratching the display by using a soft cloth.

Contaminants, such as hand lotions, oils or body powder, may come off on the sensor plates. These can reduce sensitivity and interfere with the pulse signal. It is recommended that the user has clean hands when making contact with the sensor plates. Clean the handles using a cloth dampened with water. Do not use abrasive or chemical cleaning agents.

Vacuum or sweep the floor underneath and around the bike to prevent any dust going into the machine. A treadmill mat can help to reduce dust.

EXERCISE BIKE BALANCE

Place the bike on a level floor to avoid it being off-balance.

Check if the bike is balanced:

1. Without being on the bike, place your hands on the handlebars.
2. Gently try to rock the machine from side to side.
3. If you feel any vibrations, adjust the plastic caps on the rear stabiliser.

⚠ WARNING: EQUIPMENT HAZARD

To avoid serious injury or death:

- Replace worn or damaged components immediately and do not use until repair is completed.

5 ADDITIONAL INFORMATION

CONTACT INFORMATION

In case any issues arise, please do not hesitate to contact our Customer Service team on +44 (0)800 6123 988 or email us at INFO@JLLFITNESS.CO.UK

You can also visit our support centre at SUPPORT.JLLFITNESS.CO.UK for maintenance and assembly articles & videos.

DISCLAIMER

- You should consult your physician, doctor or other health care professional before starting or taking part in any of our workout guides. It is your responsibility to evaluate your own health before taking part or performing any physical activity you may see associated with JLL Fitness Ltd.
- Always seek professional advice before changing your diet or starting any exercise program.
- JLL Fitness Ltd is not liable for any injuries or damages that may occur when assembling or using this exercise bike.
- By reading this you assume full responsibility for any injuries or changes to your physical well-being. You waive all rights and release JLL Fitness Ltd of blame from any injuries or damages to property that may occur whilst following our advice.
- This manual offers specific instructions on how to assemble and maintain your exercise bike. Failure to follow these directions may result in your warranty being void.

WWW.JLLFITNESS.COM

Follow us on Facebook and Twitter [@JLLFitness](#)

© JLL Fitness Ltd . All Rights Reserved.