

User Manual



Performance Interactive Series Recumbent Bike With Arm Exerciser

SF-RB420032

ΕN

Important Safety Information

We thank you for choosing our product. To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

- 1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure, or cholesterol level.
- 2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, lightheadedness, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
- 3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
- 4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 4 feet (120 cm) of free space all around it.
- 5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
- 6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
- Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
- 8. Do not place fingers or objects into the moving parts of the equipment.
- 9. The maximum weight capacity of this unit is 265 lbs (120 kg).
- 10. This equipment is not suitable for therapeutic use.
- 11. To avoid bodily injury and/or damage to the product or property, proper lifting and moving are required.
- 12. Your product is intended for use in cool and dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
- 13. This equipment is designed for indoor and home use only; it is not intended for commercial use.

Statement Of Purpose

The recumbent bike is a cardio workout machine that provides full body exercise at various speeds and levels of resistance.

Waste Disposal



SUNNY HEALTH & FITNESS products are recyclable. At the end of its useful life please dispose of this article correctly and safely (local refuse sites).

EU Declaration Of Conformity

You can find the declaration of conformity at the following link: https://sunnyhealthfitness.com/pages/declaration-of-conformity

Technical Data


Connectivity: Bluetooth LE

Frequency Range: 2400~2483.5 Mhz

Transmitting Power: 0 dBm

Pre-Assembly Check List


When you open the carton, you will find the following parts:

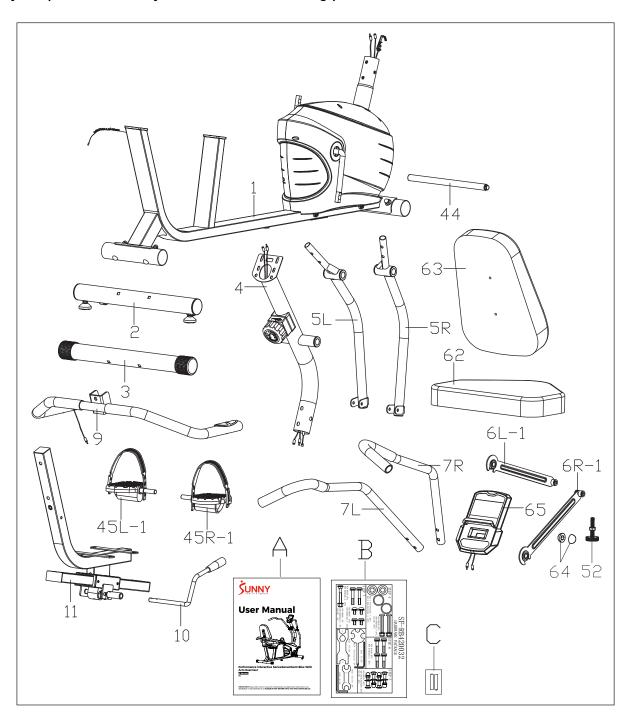

No.	Description	Spec.	Qty.
1	Main Frame		1
2	Front Stabilizer		1
3	Rear Stabilizer		7
4	Handlebar Post		7
5L	Left Swing Bar		7
5R	Right Swing Bar		7
6L-1	Left Connecting Arm		7
6R-1	Right Connecting Arm		1
7L	Left Handlebar		7
7R	Right Handlebar		1
9	Rear Handlebar		7
10	Adjustable Handle		7

No.	Description	Spec.	Qty.
11	Seat Rail		7
44	Long Axle	Φ19×300	7
45L-1	Left Pedal	YH-30	7
45R-1	Right Pedal	YH-30	7
52	Support Pad		7
62	Seat		7
63	Backrest		7
64	Nut Cap	S13	2
65	Meter	TZ4112	7
Α	Manual		7
В	Hardware Package		1
С	Battery	AAA	2

Hardware Package

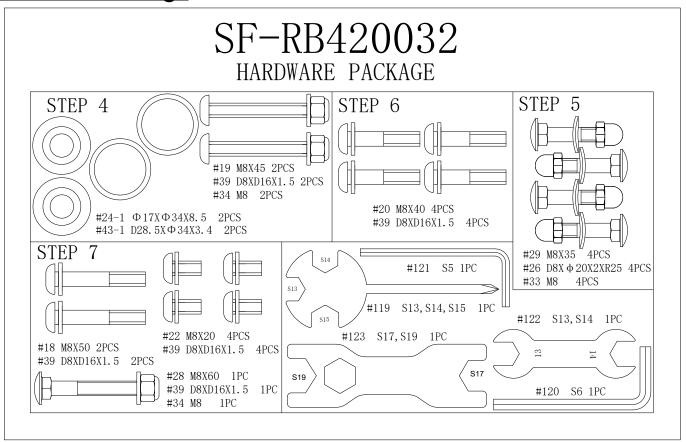


Ordering Replacement Parts

Please provide the following information in order for us to accurately identify the part(s) needed:

- √ The model number
- ✓ The product name
- ✓ The part number

Please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).


Warning Labels

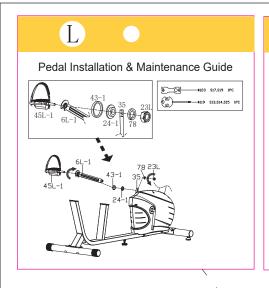



IMPORTANT WARNING! Verify you have the Left
Pedal (No. 45L-1) in hand when assembling the left
side. Attach the Left Pedal (No. 45L-1) to the left side of
the Crank (No. 35) with Left Connecting Arm (No.
6L-1), Spacer (No. 43-1) and Alloy Bushing (No.
24-1). Turn the Left Pedal (No. 45L-1) counterclockwise as tightly as you can with your hand. Use
Spanner (No. 119) to hold the pedal bolt on Left Pedal
(No. 45L-1) in place. Use Spanner (No. 123) to screw
the Spring Washer (No. 78) and BLACK Left Nylon
Nut (No. 23L) clockwise onto the end of Left Pedal
(No. 45L-1). Failure to follow this instruction may result
in irreversible damage to your new equipment.



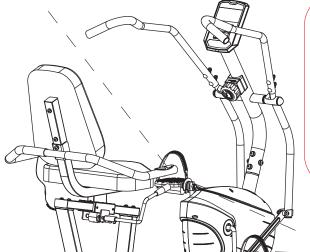





Note failure to follow these instructions will result in overtightening the nut to the pedal bolt.

Left Pedal: hold the left pedal bolt with your left hand, turn the nut away from you to remove it.

Right Pedal: hold the right pedal bolt with your right hand, turn the nut away from you to remove it.



WARNING

265LBS/120KG Weight Capacity


Keep children and pets away from equipment when in use.

Failure to comply with these warnings could result in serious injury or death. Please read all warnings and instructions before using the machine. Consult your physician prior to beginning any exercise program. Make sure all nuts and bolts are securely tightened before each use. Follow all the instructions in the manual. For Customer Service, please contact: support@sunnyhealthfitness.com.







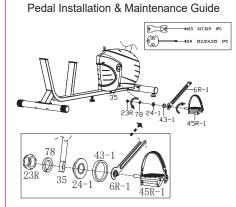







IMPORTANT WARNING! Verify you have the Right Pedal (No. 45R-1) in hand when assembling the right side. Attach the Right Pedal (No. 45R-1) to the right side of the Crank (No. 35) with Right Connecting Arm (No. 6R-1), Spacer (No. 43-1) and Alloy Bushing (No. 24-1). Turn the Right Pedal (No. 45R-1) clockwise as tightly as you can with your hand. Use Spanner (No. 119) to hold the pedal bolt on Right Pedal (No. 45R-1) in place. Use Spanner (No. 123) to screw the Spring Washer (No. 78) and WHITE Right Nylon Nut (No. 23R) counter-clockwise onto the end of Right Pedal (No. 45R-1). Failure to follow this instruction may result in irreversible damage to your new equipment.

Assembly Instructions

We value your experience using Sunny Health and Fitness products. For assistance with parts or troubleshooting, please contact us at support@sunnyhealthfitness.com or 1-877-90SUNNY (877-907-8669).

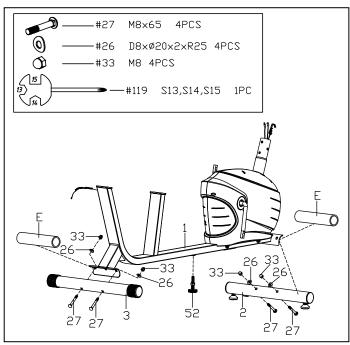

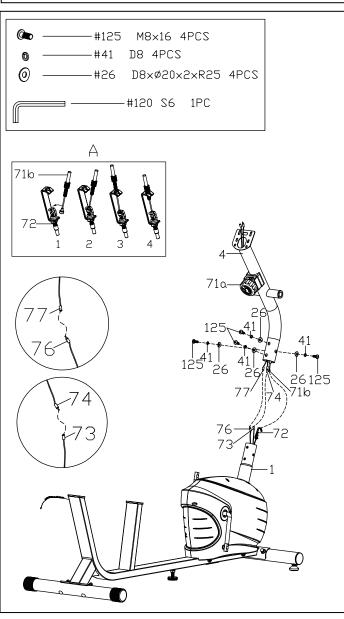

STEP 1:

Remove the 2 Paper Tubes (No. E), 4 Carriage Bolts (No. 27), 4 Arc Washers (No. 26) and 4 Cap Nuts (No. 33) from the Main Frame (No. 1) using Spanner (No. 119).

NOTE: You may discard the 2 **Paper Tubes (No. E)** or save them to repackage the item in the future.

Attach the Front Stabilizer (No. 2) and the Rear Stabilizer (No. 3) to the Main Frame (No. 1) with 4 Carriage Bolts (No. 27), 4 Arc Washers (No. 26) and 4 Cap Nuts (No. 33) that were just removed using Spanner (No. 119).

Tighten the **Support Pad (No. 52)** to the bottom of the **Main Frame (No. 1)**.

STEP 2:

Remove 4 Screws (No. 125), 4 Spring Washers (No. 41) and 4 Arc Washers (No. 26) from the Main Frame (No. 1) using Allen Wrench (No. 120).


NOTE: Make sure the Tension Controller (No. 71a) is at the lowest level before you connect the cable. This ensures the cables are at their longest point. We recommend the assistance of a second person to help hold the Handlebar Post (No. 4). This will make the connection easier when you are attaching Tension Hook (No. 72) to the Tension Cable (No. 71b).

Attach the **Tension Cable (No. 71b)** into the metal bracket of **Tension Hook (No. 72)** as shown in drawing A-①. Then, pull **Tension Cable (No. 71b)** upward and insert it into the slot of metal bracket of **Tension Hook (No. 72)** as shown in drawing A-③. Make sure the metal fitting on **Tension Cable (No. 71b)** is secured in the metal bracket.

Connect the **Pulse Extension Wire 2 (No. 77)** to the **Pulse Extension Wire 1 (No. 76)** and connect the **Sensor Extension Wire 2 (No. 74)** to the **Sensor Extension Wire 1 (No. 73)**.

Attach the Handlebar Post (No. 4) to the Main Frame (No. 1) with 4 Screws (No. 125), 4 Spring Washers (No. 41) and 4 Arc Washers (No. 26) that were just removed. Tighten and secure with the Allen Wrench (No. 120).

NOTE: Do not cut or pinch any wires when attaching the **Handlebar Post (No. 4)**.

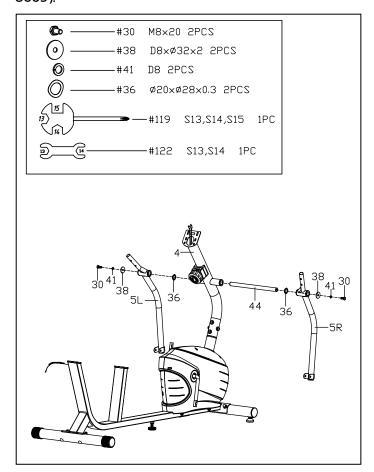


STEP 3:

Remove 2 Hex Screws (No. 30), 2 Spring Washers (No. 41), 2 Flat Washers (No. 38) and 2 Wave Washers (No. 36) from the Long Axle (No. 44) using the Spanner (No. 119) and the Spanner (No. 122).

Insert the Long Axle (No. 44) into the Handlebar Post (No. 4), then insert 2 Wave Washers (No. 36) that were just removed to the both sides of Long Axle (No. 44). Attach the Left and Right Swing Bars (No. 5L & No. 5R) to both sides of the Long Axle (No. 44) using 2 Flat Washers (No. 38), 2 Spring Washers (No. 41) and 2 Hex Screws (No. 30) that were just removed. Pre-secure with the Spanner (No. 119) and the Spanner (No. 122).

NOTE: Do not completely tighten the **Hex Screws** (No. 30) yet.

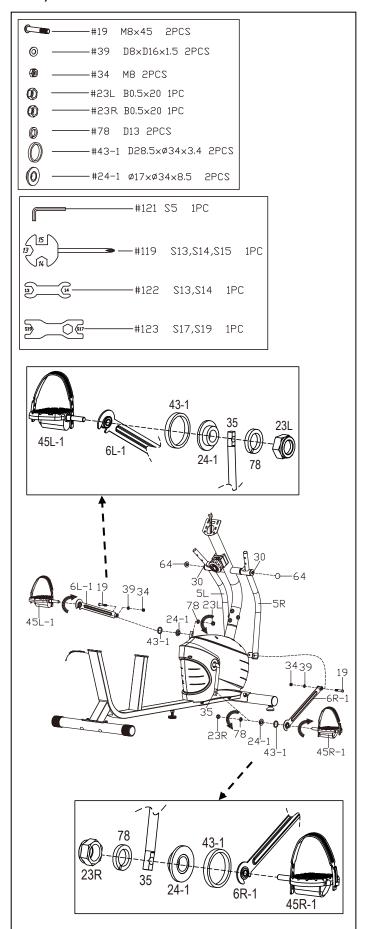

STEP 4:

Remove Left and Right Nylon Nuts (No. 23L & No. 23R) and 2 Spring Washers (No. 78) from the Left and Right Pedals (No. 45L-1 & No. 45R-1) by Spanner (No. 123).

Attach the Left Pedal (No. 45L-1) to the left side of Crank (No. 35) with 1 Left Connecting Arm (No. 6L-1), 1 Spacer (No. 43-1) and 1 Alloy Bushing (No. 24-1). Turn the Left Pedal (No. 45L-1) counter-clockwise as tightly as you can with your hand. Use Spanner (No. 119) to hold the pedal bolt on Left Pedal (No. 45L-1) in place. Use Spanner (No. 123) to screw 1 Spring Washer (No. 78) and 1 BLACK Left Nylon Nut (No. 23L) clockwise onto the end of Left Pedal (No. 45L-1).

Attach the Right Pedal (No. 45R-1) to the right side of Crank (No. 35) with 1 Right Connecting Arm (No. 6R-1), 1 Spacer (No. 43-1) and 1 Alloy Bushing (No. 24-1). Turn the Right Pedal (No. 45R-1) <u>clockwise</u> as tightly as you can with your hand. Use Spanner (No. 119) to hold the pedal bolt on Right Pedal (No. 45R-1) in place. Use Spanner (No. 123) to screw 1 Spring Washer (No. 78) and 1 WHITE Right Nylon Nut (No. 23R) <u>counter-clockwise</u> onto the end of Right Pedal (No. 45R-1).

NOTE: Please do not fully tighten Left and Right Pedals (No. 45L-1 & No. 45R-1) and Left and Right Nylon Nuts (No. 23L & No. 23R) at this time. Attaching the Left and Right Pedals (No. 45L-1 & No. 45R-1) to the wrong side of the Crank (No. 35) or turning it the wrong direction can damage the Crank (No. 35).

Attach Left and Right Swing Bars (No. 5L & No. 5R) to Left and Right Connecting Arms (No. 6L-1 & No. 6R-1) with 2 Bolts (No. 19), 2 Flat Washers (No. 39) and 2 Nylon Nuts (No. 34) using Allen Wrench (No. 121) and Spanner (No. 119).

NOTE: Please do not fully tighten 2 **Bolts (No. 19)** at this time.


Firstly, fasten Left and Right Pedals (No. 45L-1 & No. 45R-1) and Left and Right Nylon Nuts (No. 23L & No. 23R) using Spanner (No. 123) and Spanner (No. 119).

Secondly, fasten 2 **Bolts (No. 19)** and 2 **Nylon Nuts (No. 34)** using **Allen Wrench (No. 121)** and **Spanner (No. 119)**.

Then fasten 2 Hex Screws (No. 30) for STEP 3 using Spanner (No. 119) and the Spanner (No. 122).

Finally, cover with 2 Nut Caps (No. 64).

NOTE: Ensure that all bolts and washers are in place and partially threaded in before completely tightening any of them.

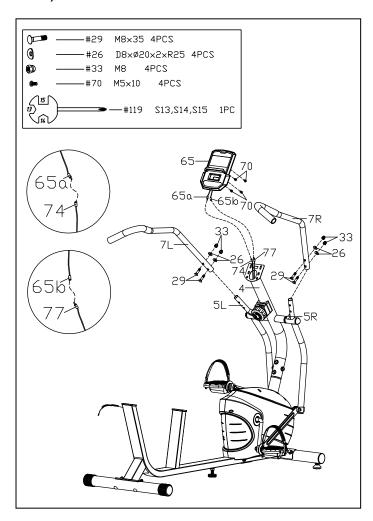


STEP 5

Attach Left and Right Handlebars (No. 7L & No. 7R) to Left and Right Swing Bars (No. 5L & No. 5R) with 4 Carriage Bolts (No. 29), 4 Arc Washers (No. 26) and 4 Cap Nuts (No. 33). Tighten and secure with Spanner (No. 119).

Remove the preassembled 4 Screws (No. 70) from the Meter (No. 65) with Spanner (No. 119).

Connect the Pulse Extension Wire 2 (No. 77) with Meter Pulse Connecting Wire (No. 65b), and connect the Sensor Extension Wire 2 (No. 74) with Meter Sensor Connecting Wire (No. 65a).

Attach the Meter (No. 65) to the bracket of the Handlebar Post (No. 4) with 4 Screws (No. 70) that were just removed using Spanner (No. 119).

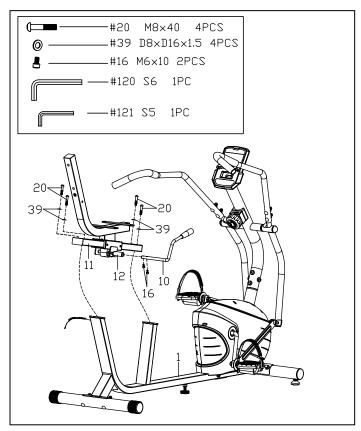


STEP 6

Attach the **Seat Rail (No. 11)** to the **Main Frame (No. 1)** with 4 **Bolts (No. 20)** and 4 **Flat Washers (No. 39)**. Tighten and secure with **Allen Wrench (No. 120)**.

Remove 2 **Screws (No. 16)** from the **Adjustable Handle (No. 10)** using **Allen Wrench (No. 121)**.

Attach the **Adjustable Handle (No. 10)** to the **Axle (No. 12)** with 2 **Screws (No. 16)** that were just removed. Tighten and secure with **Allen Wrench (No. 121)**.

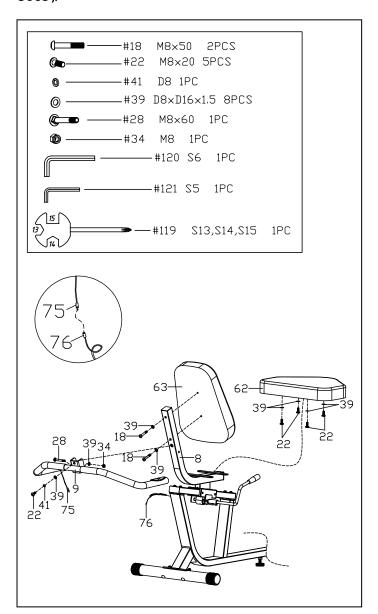

STEP 7

Remove 1 Screw (No. 22), 1 Spring Washer (No. 41) and 1 Flat Washer (No. 39) from the Seat Support (No. 8) using Allen Wrench (No. 120).

Attach the Rear Handlebar (No. 9) to the Seat Support (No. 8) with 1 Screw (No. 22), 1 Spring Washer (No. 41) and 1 Flat Washer (No. 39) that were just removed. Tighten and secure with Allen Wrench (No. 120).

Tighten the Rear Handlebar (No. 9) to the Seat Support (No. 8) with 1 Carriage Bolt (No. 28), 1 Flat Washer (No. 39) and 1 Nylon Nut (No. 34) using Spanner (No. 119).


Connect the **Pulse Extension Wire 1 (No. 76)** to the **Pulse Wire (No. 75)**.

Attach the **Seat (No. 62)** to the **Seat Support (No. 8)** with 4 **Flat Washers (No. 39)** and 4 **Screws (No. 22)**. Tighten and secure with **Allen Wrench (No. 120)**.

Attach the Backrest (No. 63) to the Seat Support (No. 8) with 2 Flat Washers (No. 39) and 2 Bolts (No. 18) using Allen Wrench (No. 121).


THE ASSEMBLY IS COMPLETE!

Adjustment Guide

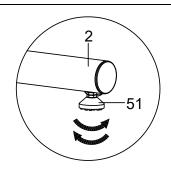


ADJUSTING THE BALANCE

In order to achieve a smooth and comfortable ride, you must ensure that the bike is stabled and secured. If you notice that the bike is unbalanced during use, you should adjust the **Adjustable Pads (No. 51)** located on the **Front Stabilizer (No. 2)** until the bike becomes levelled with the floor surface.

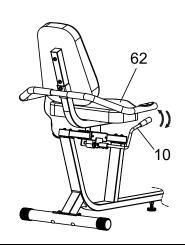

ADJUSTING THE SEAT


To move the **Seat (No. 62)** forward or backward, while seated on the bike, put your feet on the floor. Shift the **Adjustable Handle (No. 10)** down to loosen. Adjust the **Seat (No. 62)** to your desired position, then shift the **Adjustable Handle (No. 10)** up to secure.

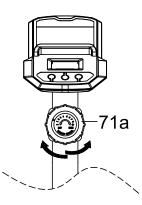

ADJUSTING THE TENSION

Adjust the tension by rotating the **Tension Controller** (No. 71a) <u>clockwise</u> to increase the level of resistance. Rotate the **Tension Controller** (No. 71a) <u>counter-clockwise</u> to decrease the level of resistance.


Tension levels are set at Level 1 being the lowest and Level 8 being the highest.

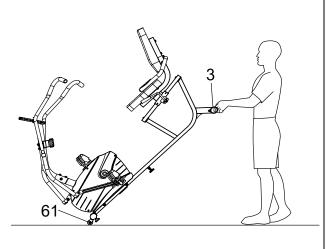

MOVING THE BIKE

Lift the bike by the **Rear Stabilizer (No. 3)** until the **Transportation Wheels (No. 61)** touch the ground. With the **Transportation Wheels (No. 61)** on the ground, you can transport the bike to the desired location with ease.

Battery Installation & Replacement

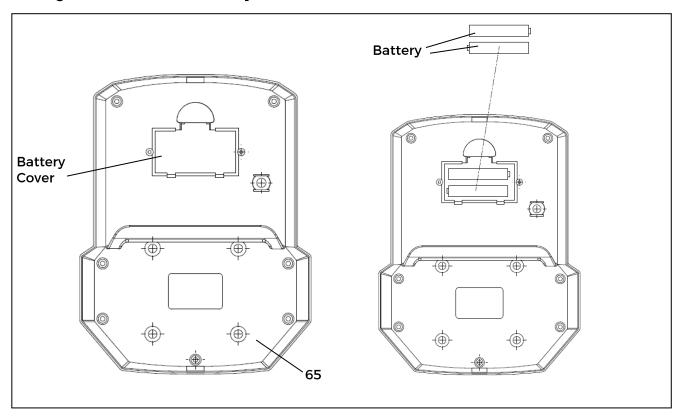

BATTERY INSTALLATION

- 1. Take out 2 AAA batteries from meter box.
- 2. Press the buckle of battery cover on the Meter (No. 65), then remove battery cover.
- 3. Install 2 AAA batteries into the battery case on the back of the **Meter (No. 65)**. Pay attention to the battery + and poles before installing.
- 4. Press the buckle of battery cover, then put the battery cover back to the back of the Meter (No. 65).

The installation is complete!

BATTERY REPLACEMENT

- 1. Press the buckle of battery cover on the back of the Meter (No. 65), then remove battery cover.
- 2. Remove the 2 old AAA batteries in the battery case and install 2 new AAA batteries into the battery case on the back of the **Meter (No. 65)**. Pay attention to the battery + and poles before installing.
- 3. Press the buckle of battery cover, then put the battery cover back to the back of the Meter (No. 65).

The replacement is complete!

BATTERY DISPOSAL

Dispose the batteries according to the laws and regulations of your local region. Some batteries may be recycled. When disposing or recycling, do not mix battery types.

Exercise Meter

FUNCTION BUTTONS:

MODE: Press the l

Press the button for selection function display value on LCD or display all function values from TMR (TIME) - SPD (SPEED) - DST (DISTANCE) - CAL (CALORIES) - ODO (ODOMETER) - RPM-PUL (PULSE). Each value will be held for 6 seconds. When Bluetooth is not connected, press the button and hold for 2 seconds, and the LCD will be all displayed. After

releasing the button, all values except ODO (ODOMETER) will

reset to zero.

(When user replaces the batteries, all the workout values will reset to ZERO automatically).

Press and hold the button for 6 seconds to disconnect from both the SunnyFit APP and the heart rate monitor; then, the meter will enter sleep mode.


SET: To set up the target value of TMR (TIME), DST (DISTANCE), and

CAL (CALORIES).

Press the button and hold for 2 seconds to speed up the

increment.

RESET: Press the button to reset function value when setting.

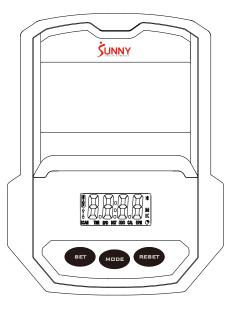

FUNCTIONS & OPERATIONS:

1. BATTERY INSTALLATION:

Please install 2 AAA 1.5V batteries in the battery case on the back of the meter. (Whenever batteries are removed, all the workout values will be reset to zero.)

2. AUTO ON/OFF:

When the user begins exercise, the meter will show the workout value automatically. When there is no sensor signal for 10 seconds, the meter will display "STOP". After about 4 minutes of inactivity, when Bluetooth is not connected, the meter will turn off.

3. AUTO SCAN:

After the meter is powered on, press MODE button and the LCD will display all function values from TMR (TIME) - SPD (SPEED) - DST (DISTANCE) - CAL (CALORIES) - ODO (ODOMETER) -RPM- PUL (PULSE). Each value will be held for 6 seconds.

4. SPD (SPEED):

Displays the current training speed from 0.0 to 99.9 MPH (Miles per hour) or KM/H.

5. DST (DISTANCE):

Accumulates total distance from 0.0 up to 999.9 M (miles) or KM. The user may preset target distance by pressing the SET & MODE buttons. Each increment is 0.1 M (Miles) or KM.

Automatically counts down from targeting value during exercise.

6. TMR (TIME):

Accumulates total time from 00:00 up to 99:59. The user may preset target time by pressing SET & MODE buttons. Each increment is 1 minute.

Automatically counts down from targeting value during exercise.

7. CAL (CALORIES):

Accumulates calories burned during training from 0.0 to 999.9 (Cal). The user may also preset the target calories before training by pressing the SET & MODE buttons. Each setting increment is 1 Cal. Automatically counts down from targeting value during exercise.

NOTE: This data is a rough guide which cannot be used in medical treatment.

8. ODO (ODOMETER):

Displays the total accumulated distance from 0.0 to 9999 M (miles) or KM. User can also press MODE button to display the odometer value.

9. RPM:

The average number pedal revolutions per minute.

10. PUL (PULSE):

The meter will display the user's heart rate in beats per minute (BPM) during training from 30 to 240. **NOTE: This data is a rough guide which cannot be used in medical treatment.**

11. SWITCH BETWEEN IMPERIAL AND METRIC SYSTEM:

Press and hold the SET & RESET buttons for about 0.2 seconds to switch between imperial and metric system.

NOTE:

- 1. If the meter display is abnormal, please install new batteries and try again. Always change both batteries at the same time. Do not mix battery types and do not mix old and new batteries.
- 2. Battery Spec: 1.5V UM-4 or AAA (2PCS).
- 3. Dispose the batteries safely, according to your state and regional guidelines.

APP CONNECTION:

Connect Smart Equipment to SunnyFit App:

1. Scan to download SunnyFit from the app store:



- Ensure that the Bluetooth function is turned on from your mobile device.
- 3. If this is your first time using the SunnyFit app, follow the in-app instructions to register for your free SunnyFit account and log in.
- 4. Begin any workout activity that matches your smart equipment, then follow the onscreen prompts to search for and connect to your smart equipment.
- 5. When connected, your stats and records will be displayed at the end of your course/session, and recorded in your account profile!

App Troubleshooting:

 If you are having trouble connecting your smart equipment, visit <u>www.sunnyfit.com/guide</u> or scan the OR code below:



If you require additional support, please contact <u>support@sunnyfit.com</u>.

BLUETOOTH :

- 1. The Bluetooth icon will flash when the meter is on or wakes from sleep mode. If no Bluetooth connection is established within 3 minutes, the Bluetooth icon will turn off.
- 2. The Bluetooth icon will stay on when it is connected.

WIRELESS HEART RATE



- 1. The wireless heart rate icon will flash when the meter is on. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
- 2. After exercise resumes, the wireless heart rate icon will flash. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
- 3. When the meter wakes from sleep mode, the wireless heart rate icon will flash. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
- 4. The wireless heart rate icon will flash when the MODE key is pressed. If the heart rate monitor is not connected within 1 minute, the wireless heart rate icon will turn off.
- 5. The wireless heart rate icon will stay on when the heart rate monitor is connected.

NOTE: The heart rate monitor is not included. Wireless heart rate function works with SunnyFit Heart Rate Monitor HR200. HR200 can only connect to the meter when the wireless heart rate icon is flashing.

Parts List


No.	Description	Spec.	Qty.
1	Main Frame		1
2	Front Stabilizer		1
3	Rear Stabilizer		1
4	Handlebar Post		1
5L	Left Swing Bar		1
5R	Right Swing Bar		1
6L-1	Left Connecting Arm		1
6R-1	Right Connecting Arm		1
7L	Left Handlebar		7
7R	Right Handlebar		1
8	Seat Support		1
9	Rear Handlebar		1
10	Adjustable Handle		1
11	Seat Rail		7
12	Axle		7
13	Fixed Plate		7
14	Screw	ST3.5×8	4
15	Set Bolt	M8×10	1
16	Screw	M6×10	2
17	Screw	M6×16	2
18	Bolt	M8×50	2
19	Bolt	M8×45	2
20	Bolt	M8×40	6
	БОП	1410~40	- 0
21	Nylon Nut	M6	1
22	Screw	M8×20	5
23L	Left Nylon Nut	B0.5×20	1
23R	Right Nylon Nut	B0.5×20	1
24-1	Alloy Bushing	Φ1 7 ×Φ34×8.5	2
25-1	Bearing	Ф12.8×28.6×Ф31×7. 9	2
26	Arc Washer	D8×Φ20×2×R25	12
27	Carriage Bolt	M8×65	4
28	Carriage Bolt	M8×60	7
29	Carriage Bolt	M8×35	4
30	Hex Screw	M8×20	2
31	Hex Nut	M10	1
32	Hex Nut	M8	2
33	Cap Nut	M8	8
34	Nylon Nut	M8	6
35	Crank	B0.5×20	7
36	Wave Washer	Ф20×Ф28×0.3	2
37	Round Plug	25×3	2
38	Flat Washer	D8×Φ32×2	2
39	Flat Washer	D8×D16×1.5	16
40	Eccentric Wheel	Φ25×38	1
41		Ψ25×38 D8	7
	Spring Washer		
42	Alloy Bushing	Φ18×Φ8.1×10 D28.5×Φ34×3.4	<u>4</u> 2
43-1	Spacer	DZ0.3*¥34*3.4	


No.	Description	Spec.	Qty.
44	Long Axle	Φ19×300	1
45L-1	Left Pedal	YH-30	l i
45R-1	Right Pedal	YH-30	<u> </u>
46	Foam Grip	Φ24×T3×290	2
47	Foam Grip	Φ24×T3×480	2
48	Grip	Black	1
			'
49	Rear End Cap	Φ 50	2
50	Wire Plug	Φ12.5	2
51	Adjustable Pad	Ф38×18	2
52	Support Pad	M10×60	1
53	Square Plug	60×30x2	2
54	Plastic Bushing	Ф 32×2 8	6
55	Upper Block	38×34x36.2	1
56	Front End Cap	Φ50×1.5	2
57	Round Plug	Φ28×1.5	2
58	Round Plug	Φ 25 ×1.5	2
59	Square Plug	38×38×1.5	2
60	Sleeve	80×40×1.5	2
61	Transportation Wheel	·	2
62	Seat	4-12-14-0E121	1
63	Backrest		1
64		S13	2
65	Nut Cap	313	1
65	Meter		I
65a	Meter Sensor Connecting Wire		1
65b	Meter Pulse Connecting Wire		1
66	Pulse Sensor		2
67	Screw	M5×15	1
68	Arc Washer	D5×Ф20	<u> </u>
00	Arc washer	D3×Ψ20	! !
69	Screw	ST4.2×18	2
70	Screw	M5×10	4
71a	Tension Controller		1
71b	Tension Cable		1
72	Tension Hook	1150 mm	1
73	Sensor Extension Wire 1	650 mm	1
74	Sensor Extension Wire 2	650 mm	1
75	Pulse Wire	700 mm	1
76	Pulse Extension Wire	2000 mm	1
77	Pulse Extension Wire	650 mm	1
78	Spring Washer	D13	2
79	Idler Wheel Linkage		1
-			1
80L	Left Belt Cover		' 1
80R	Right Belt Cover	Φ60Φ70: Ω F	
81	Crank Cover	Φ60×Φ30×8.5	2
82	Sealing	Ф50	1
83	Belt Pulley	Ф220	1
84	Plug	Φ25×22	2
85	Belt	350 PJ6	1

No.	Description	Spec.	Qty.
86	Bearing Housing	72×56×11	2
87	Idler Wheel	Ф39×24	1
88	Screw	ST4.2×19	5
89	Phillips Head Screw	ST4.2×18	8
90	Phillips Head Screw	M6×10	4
91	Screw	M6×8	2
92	Spring Washer	D12	3
93	Flywheel	Ф200×40	1
94	Screw	Φ14×Φ10×M8×20.5	1
95	Hex Bolt	M5×60	1
96	Hex Screw	M6×15	5
97	Hex Nut	M5	2
98	Nut	4.5×32×32	2
99	Washer	Ф22.6×Ф28×2.5	1
100	Locking Nut-L	Φ 45 ×H3.5	1
101	Open Face Bearing	Φ 45 .8×8.8	2
102	Bearing Housing	2.5×76×76	2
103	Locking Nut-R	Φ 45 ×H3.5	1
104	Big Flat Washer	Ф25.2×Ф38х1	1
105	Sensor Bracket		1

No.	Description	Spec.	Qty.
106	Adjustable Belt Bolt	M6×36	1
107	Magnetic Board Axle	Φ12×61	1
108	Wave Washer	D12×Φ15.5×0.3	2
109	Flat Washer	D6×Φ16×1.5	3
110	Flat Washer	D6×D12×1.2	2
111	Flat Washer	D10×Φ14×1	1
112	Flywheel Axle	Φ 20 ×103	1
113	Bearing Bracket	72×56×1.5	2
114	Magnet	40×25×10	4
115	Spring Washer	D6	5
116	Spring	Φ1.6×Φ15× L47 .	1
117	Spring	Ф 3 ×Ф 1 8× L 58.5	1
118	Bearing	6001RS	4
119	Spanner	S13,S14,S15	1
120	Allen Wrench	S6	1
121	Allen Wrench	S5	1
122	Spanner	S13,S14	1
123	Spanner	S17,S19	1
124	Magnetic Board		1
125	Screw	M8×16	4

Exploded Diagram

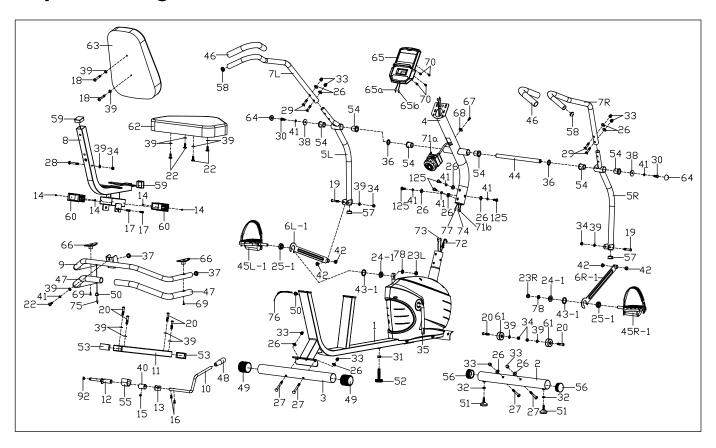

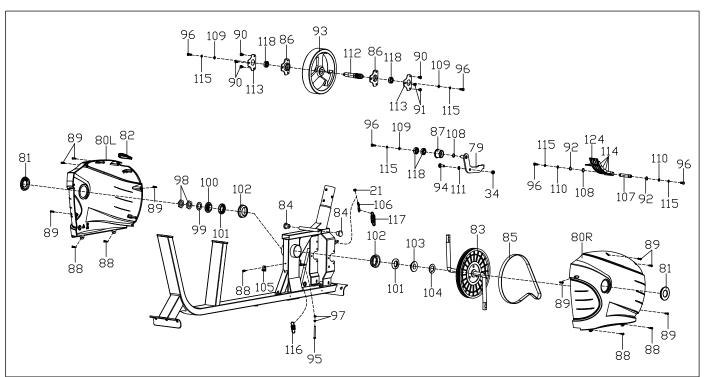

Version: 3.2

Register

Register your product and verify warranty terms: **Sunnyhealthfitness.com/warranty**



ownload

Track your fitness progress & join FREE workout courses! Download SunnyFit App today!











Follow















Contact

Get in touch with us for any questions

**** 1-877-90SUNNY (877-907-8669)

■ support@sunnyhealthfitness.com